

Materials included in INVISI-ball Wall Mount

package:

INVISI-ball Mounting bracket - 1
INVISI-ball "B-Band" - 1
Drywall mount – 2
Screws – 2



INVISI-BALL®

WALL MOUNT

...keeps your eye on the ball!®

US BASKETBALLS (29.5")
NBA / COLLEGE BASKETBALLS

MOUNTING INSTRUCTIONS



INSTRUCTIONAL VIDEO : <https://www.youtube.com/watch?v=Bq3RUw7tzBY>

TOOLS NEEDED: Tape measure, Pencil, Power Drill, Screwdriver, 3/16" drill bit, Hammer

NOTE: For optimum mounting results, please keep all balls properly inflated – DO NOT OVER INFLATE. Check the air pressure of the ball periodically to make certain the ball is mounted securely.

MOUNTING INSTRUCTIONS FOR INVISI-ball Wall Mount

Hanging a BASKETBALL (full size regulation- 29.5") – – see Fig. 1.

*** INVISI-ball gives you this unique mounting feature ***

*** This mounting feature is to be used when you want to display a basketball on the wall or **ceiling** – NOTE: There are only 4 different positions a basketball may be mounted with the INVISI-ball Wall Mount in order to **completely** mask the mounting band since there are only 2 seams that run around the circumference of the basketball – see Fig. 1 as an example***

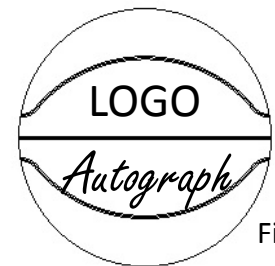


Fig. 1

Step 1: Find a desired location where you would want to mount the basketball on the wall – angled wall – or ceiling.

Step 2: Place the INVISI-ball Wall Mount bracket component against the wall at the desired position including desired height from floor. Please note that the wall mount component must be facing in the "UP" direction as noted on the wall mount. Optionally, a stud sensor may be used to locate a wood stud to reduce the need for a dry wall anchor.

Step 3: Mark with a pencil the desired location for your basketball to be hung.

Step 4: If applying screws directly through the wall and into a stud, drill a small pilot hole to help guide the screw into the wall stud. If using the drywall anchors - take a 3/16" (5mm) drill bit and drill a hole where the pencil marks have been made in step 3 and add drywall anchors. Taking a hammer and lightly tapping the anchors flush with the wall will provide a proper surface to place the INVISI-ball Wall Mount. This is to be done if a stud is not located where you are locating the holes for the mount.

Step 5: Using a power drill or screwdriver, screw the screws (provided) into the wall stud or drywall anchors. Be sure to leave enough room to slide the INVISI-ball Wall Mount bracket up and down using the keyhole slot.

Step 6: Using a ball inflation needle, carefully let the air out of the basketball that you wish to mount. (Fig. 2)

Step 7: Locate "B-Band" cable (black) and place the cable in the horizontal slot of the INVISI-ball Wall Mount bracket (Fig. 3) – Guide the "B-Band" around the basketball at the desired location and INVISI-ball Wall Mount bracket as shown (Fig. 4), finding a seam in the basketball to mask the mounting band.

Step 8: Inflate the basketball to create the necessary pressure (compression) between the INVISI-ball Wall Mount bracket and "B-band" cable. **Do not overinflate** the basketball and place unnecessary pressure on the mounting Bracket, "B-band" or the seams of the basketball. Once the necessary compression has been placed on the ball and mount, the ball will stay securely in place once it is mounted on the wall – or ceiling.

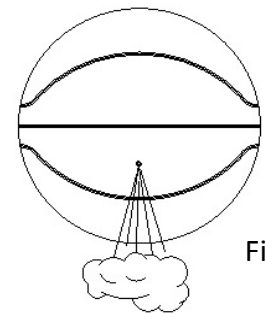


Fig. 2

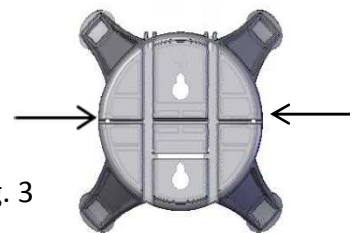


Fig. 3

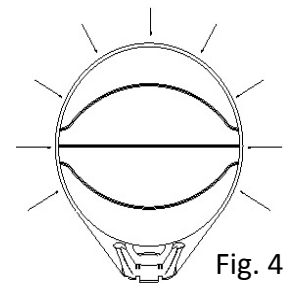


Fig. 4

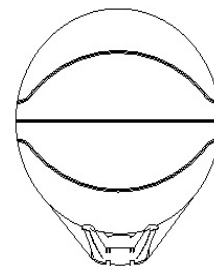


Fig. 5

Materials included in INVISI-ball Wall Mount

package:

- INVISI-ball Mounting bracket - 1
- INVISI-ball "B-Band" - 1
- Drywall mount - 2
- Screws - 2



INVISI-BALL®
WALL MOUNT
...keeps your eye on the ball!®

US BASKETBALLS (29.5")
NBA / COLLEGE BASKETBALLS

MOUNTING INSTRUCTIONS



INSTRUCTIONAL VIDEO : <https://www.youtube.com/watch?v=Bq3RUw7tzBY>

NOTE: For optimum mounting results, please keep all balls properly inflated – **DO NOT OVER-INFLATE.**
 Check the air pressure of the ball periodically to make certain the ball is mounted securely.

WARNING:

CHOKING HAZARD – Small parts not for children under 3 years
 Or any individuals who have a tendency to place inedible objects
 In their mouths.

U.S.
PATENT
 — 9,149,133 —

Methods for using Ball Mount
 Assemblies Using Inelastic Bands

*Also available now
 from INVISI-ball
 Wall Mount...*



INVISI-ball Wall Mount products are
 manufactured, assembled and
 distributed in the U.S. A.

01/2017

INVISI-BALL®
WALL MOUNT

WWW.INVISI-BALL.COM

...keeps your eye on the ball!®

INVISI-BALL WALL MOUNT

P.O. Box 2198
 APEX, NC 27502
 919-817-1487

WWW.INVISI-BALL.COM