

# INVISI-BALL<sup>®</sup> WALL MOUNT

...keeps your eye on the ball!<sup>®</sup>

## Materials included in INVISI-ball Wall Mount

### package:

- INVISI-ball Mounting bracket - 1
- INVISI-ball "C-Band" (clear) - 1
- Drywall mounts – 2
- Screws – 2



US / REGULATION SIZE  
VOLLEYBALLS



# MOUNTING INSTRUCTIONS

**TOOLS NEEDED:** Tape measure, Pencil, Power Drill, Screwdriver, 3/16" drill bit, Hammer

**NOTE:** For optimum mounting results, please keep all balls properly inflated – DO NOT OVER INFLATE.

## MOUNTING INSTRUCTIONS FOR INVISI-ball Wall Mount (Option 5)

### Hanging a VOLLEYBALL (full size regulation) – – see Fig. 1.



*\* INVISI-ball gives you this unique mounting option \**

*\*\*\* This mounting feature is to be used when you want to display a volleyball on the wall or ceiling – NOTE: There are multiple positions a volleyball may be mounted with the INVISI-ball Wall Mount in order to partially, but effectively mask the mounting band since the seams noted for mounting the ball do NOT fully encircle the volleyball – see Fig. 1 as an example\*\*\**

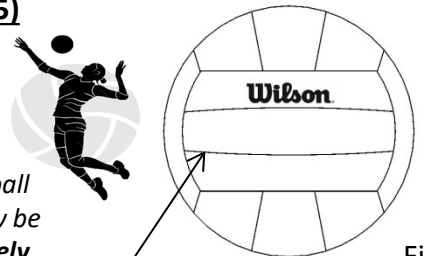


Fig. 1

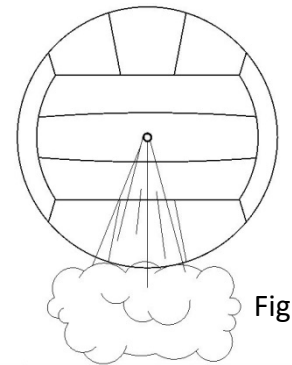


Fig. 2

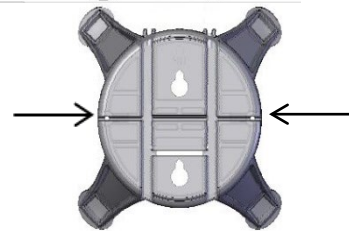


Fig. 3

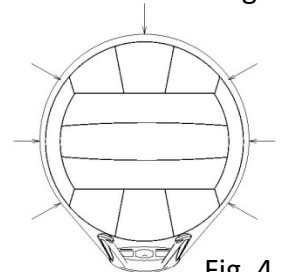


Fig. 4

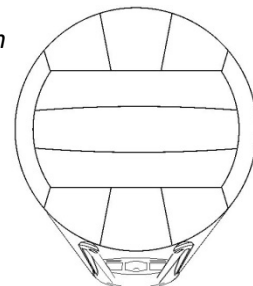


Fig. 5

**Step 1:** Find a desired location where you would want to mount the volleyball on the wall – angled wall – or ceiling.

**Step 2:** Place the INVISI-ball Wall Mount bracket component against the wall at the desired position including desired height from floor. Please note that the wall mount component must be facing in the "UP" direction as noted on the wall mount. Optionally, a stud sensor may be used to locate a wood stud to reduce the need for a dry wall anchor.

**Step 3:** Mark with a pencil the desired location for your volleyball to be hung.

**Step 4:** If applying screws directly through the wall and into a stud, drill a small pilot hole to help guide the screw into the wall/stud. If using the drywall anchors - take a 3/16" (5mm) drill bit and drill a hole where the pencil marks have been made in step 3 and add drywall anchors. Taking a hammer and lightly tapping the anchors flush with the wall will provide a proper surface to place the INVISI-ball Wall Mount. This is to be done if a stud is not located where you are placing the holes for the mount.

**Step 5:** Using a power drill or screwdriver, screw the screws (provided) into the wall or drywall anchors. Be sure to leave enough room to slide the INVISI-ball Wall Mount bracket up and down using the keyhole slot.

**Step 6:** Using a ball inflation needle, carefully let the air out of the volleyball that you wish to mount. (Fig. 2)

**Step 7:** Locate "C-Band" cable (clear) and place the band in the horizontal slot of the INVISI-ball Wall Mount bracket (Fig. 3) – Guide the "C-Band" around the volleyball at the desired location and INVISI-ball Wall Mount bracket as shown (Fig. 4). Locate the "C-Band" in the seam noted in Fig.1 - "\*\*\*\*" as this location will place the band in a seam of the volleyball that will provide more "up-lift" on the ball when it is mounted.

**Step 8:** Inflate the volleyball to create the necessary pressure (compression) between the INVISI-ball Wall Mount bracket and "C-band" cable. Do not overinflate the volleyball and place unnecessary pressure on the mounting bracket, "C-band" or the seams of the volleyball. Once the necessary compression has been placed on the ball and mount, the ball will stay securely in place once it is mounted on the wall. Maintain air pressure as necessary.

# INVISI-BALL<sup>®</sup> WALL MOUNT

*...keeps your eye on the ball!*

## Materials included in INVISI-ball Wall Mount

### package:

INVISI-ball Mounting bracket - 1

INVISI-ball "C-Band" (clear) - 1

Drywall mounts – 2

Screws – 2



US / REGULATION SIZE  
VOLLEYBALLS

## MOUNTING INSTRUCTIONS

**TOOLS NEEDED:** Tape measure, Pencil, Power Drill, Screwdriver, 3/16" drill bit,  
Hammer

**NOTE:** For optimum mounting results, please keep all balls properly inflated – DO NOT OVER INFLATE.



### WARNING:



**CHOKING HAZARD** – Small parts not for children under 3 years  
Or any individuals who have a tendency to place inedible objects  
In their mouths.



U.S.  
PATENT

— 9,149,133 —

Methods for using Ball Mount  
Assemblies Using Inelastic Bands



INVISI-BALL<sup>™</sup>  
WALL MOUNT

WWW.INVISI-BALL.COM

*...keeps your eye on the ball!*<sup>™</sup>

INVISI-BALL WALL MOUNT

P.O. Box 2198

APEX, NC 27502

919-817-1487

WWW.INVISI-BALL.COM